




CHAIR ASSEMBLY GUIDE

PACKAGE CONTENTS DIAGRAM

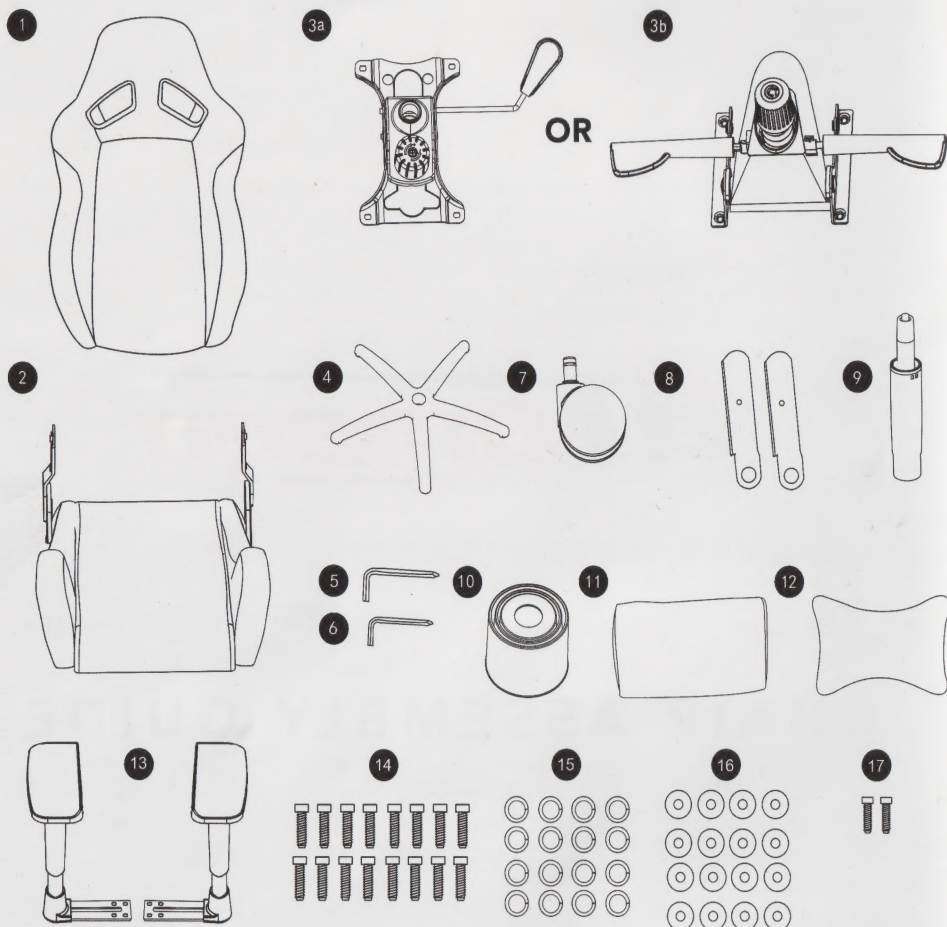

1. Backrest
2. Seat base
- 3a. Small chair mechanism
- 3b. Large chair mechanism
4. Five-star base
5. 8mm Allen key
6. 6mm Allen key
7. 5x Caster wheel
8. Side cover

9. Gas piston
10. Piston cover
11. Lumbar cushion
12. Headrest cushion
13. 2x Armrests
14. 16x M8 bolts
15. 16x 8mm spring washers
16. 16x M8 washer
17. 2x M6 bolts



NOTE: 2X M6 BOLTS , M8 BOLTS ARE ALL PRE-INSTALLED INTO THE CHAIR

INSTALLATION GUIDE



CAUTION

DO NOT ADJUST THE
LEVER UNTIL THE BACK
HAS BEEN INSTALLED

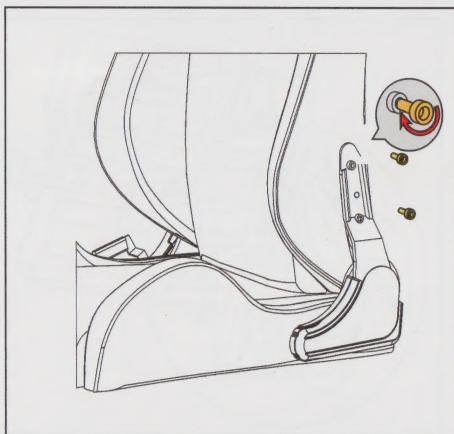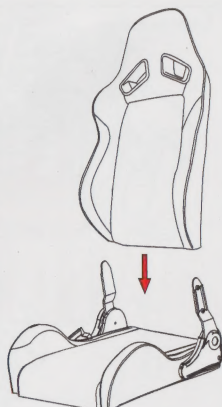

1

Connect seat back with seat base


Remove the four pre-installed M8 bolts from the backrest using the 8mm Allen key. Align the backrest and the rear of the seat base carefully according to the picture.

Secure back onto the seat via the loose support bracket before the tight one.

2

Secure seat back with seat base


Use the 8mm Allen key and the previously removed M8 bolts to attach the backrest to the seat base.

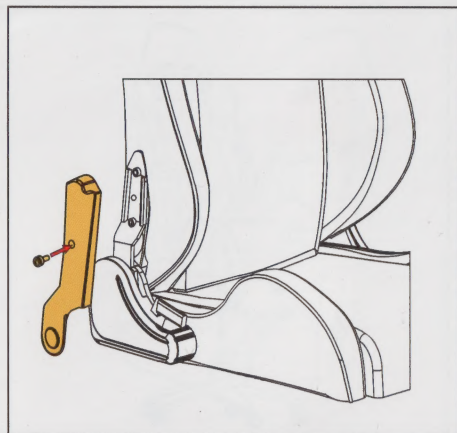

3

Right side cover


Attach the right side cover to the support bracket on the chair. Then fasten the M6 bolts using 6mm Allen key.

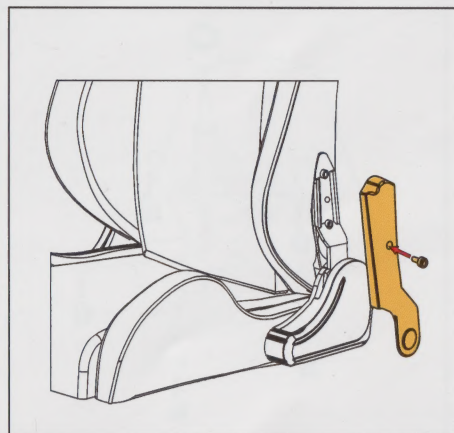

4

Left side cover

Attach the left side cover to the support bracket on the chair. Then fasten the M6 bolts using 6mm Allen key.

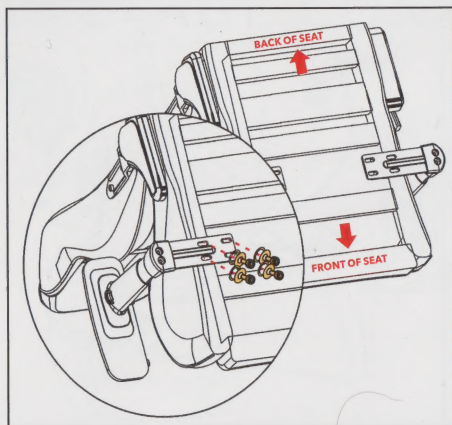


5

Armrest mounting


Attach the armrests, making sure the correct armrests are on their designated side.

Secure the arm rests with the M8 bolts, spring washers and washers supplied. Attach all four of the bolts, spring washers and washers before tightening.

Small Mechanism

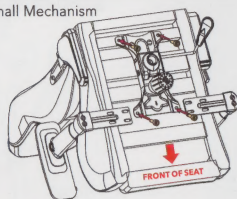


Large Mechanism

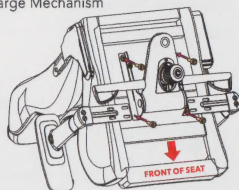

6

Chair mechanism mounting

Remove the four pre-installed M8 screws with the 8mm Allen key from the bottom of the seat base. Align the chair mechanism according to the posted directions on the bottom of the seat base. Attach the chair mechanism by using the previously removed M8 screws.

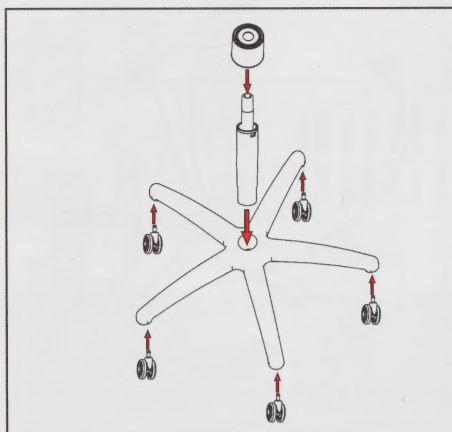

7

Caster wheel, Five-star base, Gas piston and Piston cover Installation


Insert the gas lift piston into the five-star base and then slide the piston cover over the gas lift.



8

Linking the parts


Align and connect the base and chair by inserting the gas piston into the opening on the chair mechanism according to the picture.

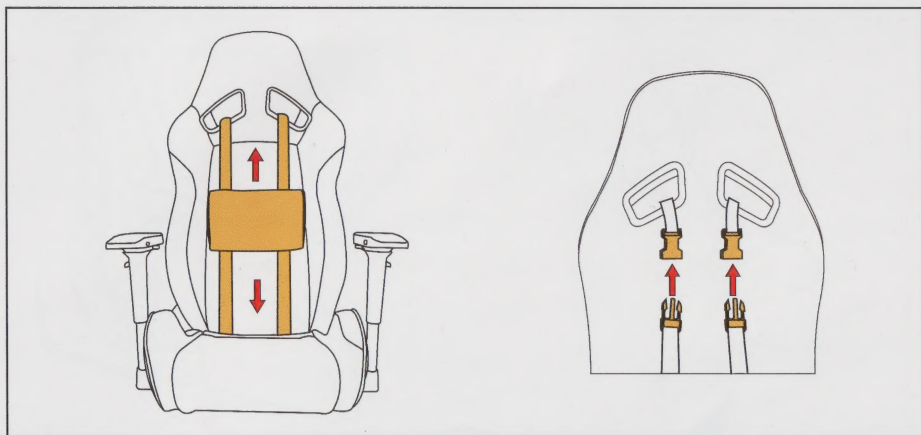

9

Detachable lumbar cushion

Pull the lumbar cushion straps through the backrest openings from front to back according to the picture. Connect both buckles from the bottom and top of the backrest to secure and adjust the lumbar cushion.

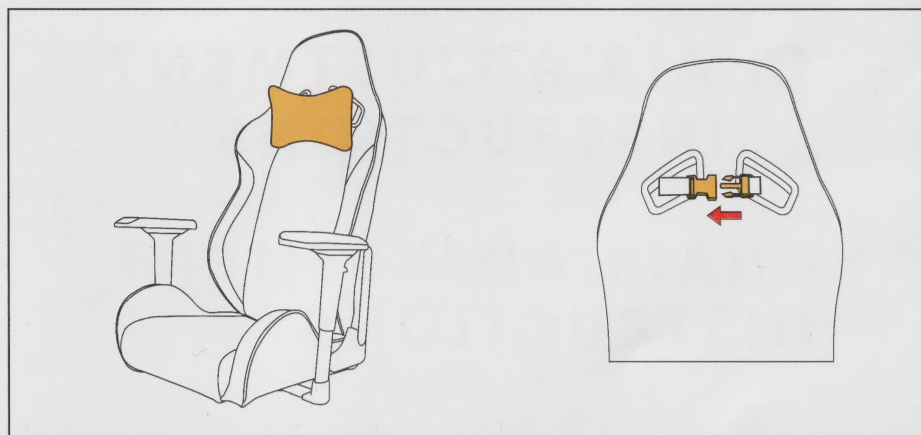

10


Detachable headrest cushion

Pull the headrest cushion straps through the backrest openings according to the picture. Connect the buckle to secure the headrest cushion.



CHAIR ADJUSTMENT INSTRUCTIONS


CHAIR ADJUSTMENT INSTRUCTIONS

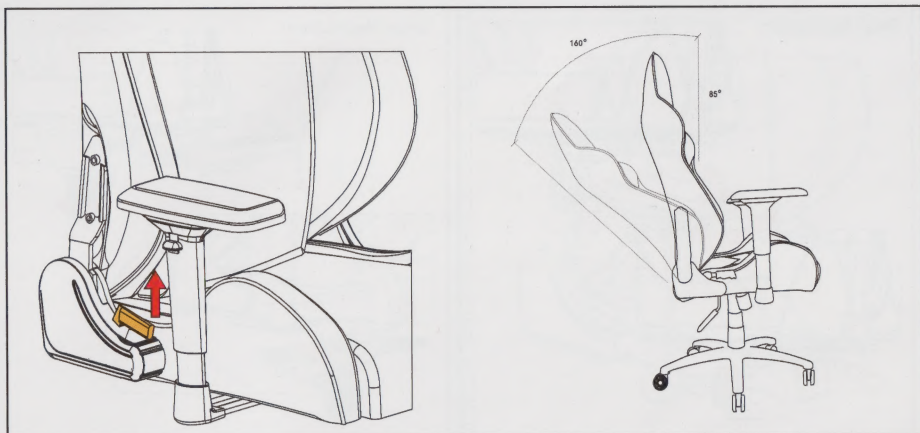

1

Seat backrest adjustment

Pull the handle on the right side of the seat and lean backwards to tilt the backrest into the desired position. Lock the position by releasing the handle.

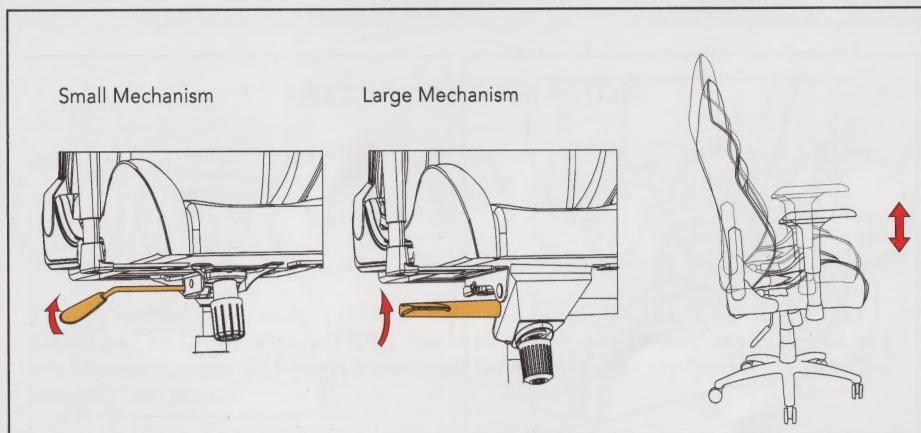


2


Seat height adjustment

Pull up the handle underneath the right side of seat base to adjust the seat height and then lock it by releasing the handle.

Small Mechanism

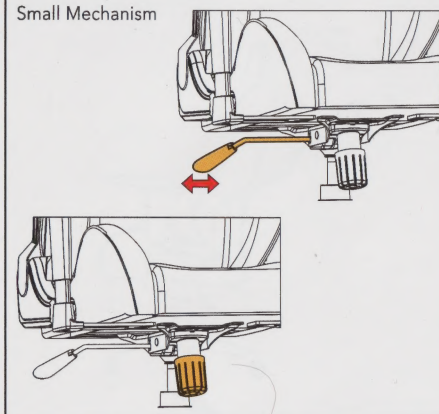

Large Mechanism

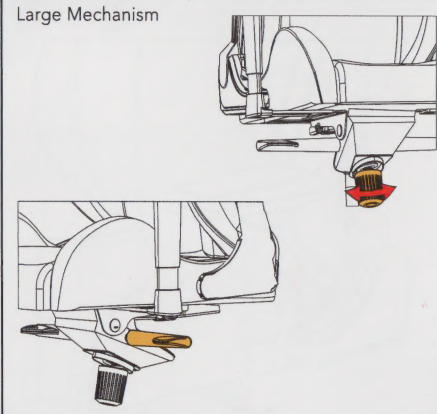

3

Rocking feature



On the small mechanism, pull out the handle on the right side of the seat base to enable the rocking feature.

On the large mechanism, flip the paddle on the left side of the seat base up to enable the rocking feature. To lock your position, flip the paddle back down until the desired position is reached.

4

Adjustment of rocking feature

Turn the knob underneath the seat base left and right to adjust the tension of the rocking mechanism.

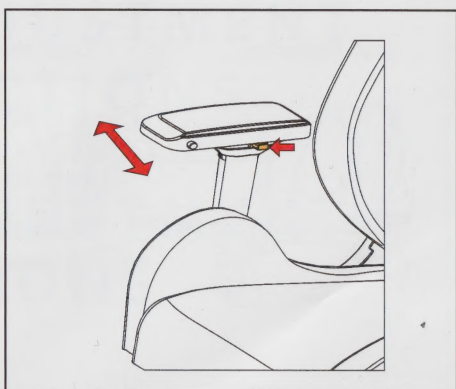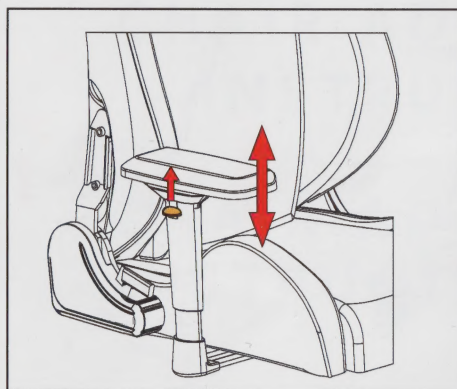

5



Vertical adjustment

Pull the handle up and down to the desired height. Release the handle to lock the height according to preference.

6

Horizontal adjustment

Press and hold the middle button to move the armrest horizontally. Release the button to lock the position according to preference.

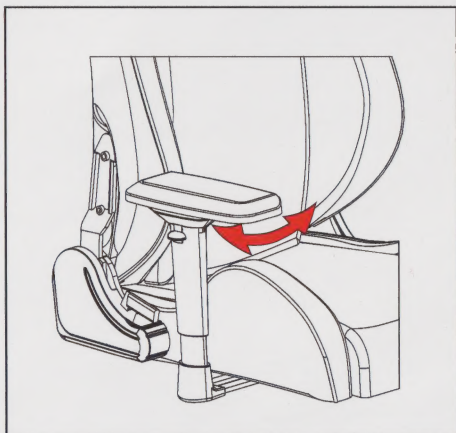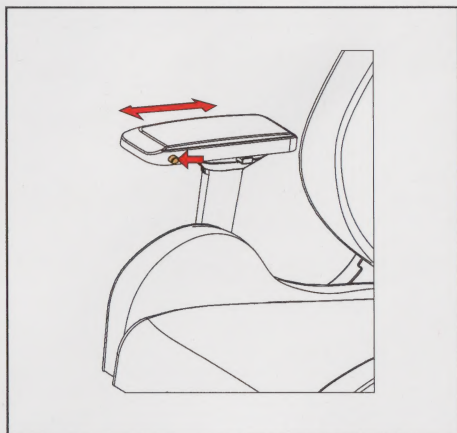

7

Front to back adjustment

Hold the front button to move the armrest back and forth. Release the button to lock the position according to preference.

8

Rotating adjustment

The armrest can be rotated inwards and outwards without the use of a button.

SAFETY INFORMATION



The maximum user weight of the PRO and ELITE Series is up to 120kg, SPORT and XL Series is up to 150kg. The chair should only be used as shown and in a non-abusive manner. GT Omega is not liable for any damages resulting from improper assembly and usage.

GT Omega Racing Ltd.
Unit C1 - GTOmega, 24 Craigmont Street,
G20 9BT Glasgow, United Kingdom
